

MDS Mobile Display & Support System

UNCRATING INSTRUCTIONS

Suggested Tools:

- 1/4" Ratchet Socket Set with Sockets 9/16", 3/8" and 7/16".
- Swivel Knife, box cutter or equivalent.

Step 1. Locate and position the pallet to a level surface where there is at least 9 feet of clear space to allow the unloading ramp to lower and the MDS cart to be offloaded.

Step 2. Inspect the shipping carton and pallet for external damage.

Step 3. Using the cutting tool, remove the straps on the shipping carton. The skid ramp is free standing at this point, so it should be held in place by hand until ready to be lowered.

Step 4. Slowly lower the skid ramp onto a level surface.



Step 5. Remove the top part of the shipping carton which will allow the sides to fall away from the MDS cart.

Step 6. Remove the clear plastic bag on the MDS cart and the straps holding the monitor arms in place. Swing the arms out and remove the 2 accessory boxes containing the monitor and conductor. The boxes contain fragile components and should be handled carefully.



SHIPPING STRAPS



CAUTION!
Always use a minimum of two persons while transporting MDS unit to aid in maneuverability and to aid with visibility. Moving it over uneven or sloped surfaces requires extra attention.

Step 7. Inspect the cart and accessories for cosmetic or structural damage. If damage is found, take photos, note it on the shipping documents and notify IDI customer service immediately at (978) 829-0009 or toll free at (877) 304-5434.

Step 8. Using a ratchet with a 9/16” socket, remove the 4 bolts securing the MDS to the skid (2 in front and 2 in back). Also remove the 2 hex nuts from the lag bolts on the pallet and remove the front bracket.



Step 9. Attach plastic caps provided over the 4 bolt holes in the base of the MDS frame.

Step 10. Using your foot, unlock all 4 castors while holding the MDS cart in place.



Step 11. Slowly roll the MDS cart off of the skid and down the ramp until it is completely off of the ramp.

Step 12. Remove and dispose of all shipping material per customer requirements.

Revisions to this manual

REV	ECO	DATE	DESCRIPTION
A	388	13-AUG-2015	RELEASED